

Installation of JCW Steering Wheel Gen. II

10. Slide the steering wheel onto the shaft while lining up the slot at the bottom of the wheel and steering shaft. Secure wheel by installing 16mm bolt and tightening. Plug in steering wheel control connection. Now reinstall air bag by plugging in air bag connection and reattaching airbag ground onto tab. Then you can push on airbag until you hear it click on both sides of the wheel. Reattach red terminal onto battery and tighten nut. Start car to ensure there are no error messages other than the display. **Note:** You may see a yellow warning indicator in the tach display window. This is a reminder to set your clock which can be done through the radio. Enjoy!

