


Installation of JCW Steering Wheel Gen. II

3. Using a small flat head screw driver or small allen wrench, push tool into the bottom slot located on the bottom of the steering wheel just behind the bottom post to release the airbag. A little pressure may be needed to push down the spring loaded plate. Once locks are released, carefully remove the air bag ground and the airbag harness plug. Set airbag aside.
4. Using the 16mm socket, remove the bolt holding the steering wheel on. This requires a little force but not a ton.
5. Remove steering wheel control connection located next to the air bag harness connection. The wheel can now be removed by sliding the wheel off the steering shaft.

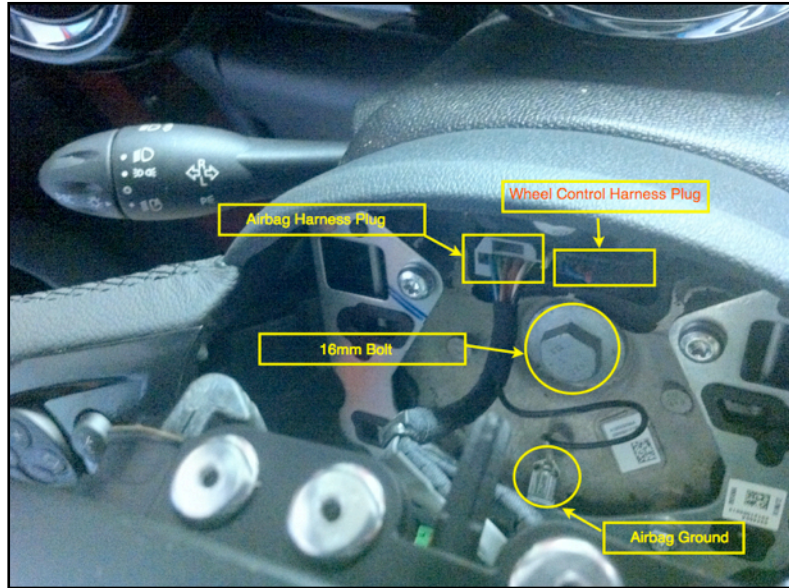

6. **This step is only necessary if you have steering wheel controls.** Remove 4 #20 Torx screws holding on the airbag retaining plate so that you can remove steering wheel control harness to move to the new steering wheel. (You may want to do this while the steering wheel is still secured on the steering shaft but you can do it once the wheel is removed.) The wheel can now be removed by sliding the wheel off the steering shaft.

