

## Installation of JCW Steering Wheel Gen. II

### Tools Needed:

1. Ratchet and extension
2. Torx driver set
3. 16mm & 10mm Socket
4. Small flat head screw driver

### Time Required:

30-40 minutes

### Procedure:

1. Open Hood and remove battery cover.



2. Loosen 10 mm nut and wiggle red terminal off of post. Set terminal aside and reattach red terminal closure to ensure terminal does not come in contact with terminal post during installation. This is **very important** to keep the airbag from going off during removal or re-installation.

