

AC[®] SCHNITZER

-Montageanleitung-

**Deko Set
- Mini -**



Teile-Nr.: 5114 55 xxx

Allgemeine Hinweise!

AC Schnitzer Deko - Set MINI

Wichtige Hinweise!

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keinerlei Haftung für Schäden, die durch unsachgemäßen Einbau entstehen!

Diese Montageanleitung ist zum Gebrauch durch autorisierte AC Schnitzer Händler bestimmt.

Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Die Verklebung der AC Schnitzer Designstreifen soll bei Untergrund- und Umgebungstemperaturen von 18°C bis 25°C erfolgen.

Bei Temperaturen unter 18°C tritt nur eine bedingt Haftung des Klebers ein. Deshalb muss die untere Temperaturgrenze von 18°C unbedingt eingehalten werden.

Montage

Fahrzeug Oberwäsche durchführen, wobei keine rückfettenden Mittel verwendet werden dürfen.

Unmittelbar vor der Verklebung die zu beklebenden Stellen mit Silikonentferner abwaschen, damit Silikon-, Fett und Ölrückstände sicher entfernt werden.

Eventuelle entstandene Luftblasen mit einer dünnen Nadel o.ä. aufstechen und glätten.

Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt ca. **12 AW**, die je nach Zustand und Ausstattung des Fahrzeugs abweichen kann.

Erforderliches Werkzeug

Cuttermesser
Putztuch
Silikonentferner
Klebeband

Gelieferte Bauteile

1 AC Schnitzer Deko - Set für:	
Mini One/Cooper/Cooper Clubman - weiß	Teile-Nr.: 5114 55 210
Mini One/Cooper/Cooper Clubman - schwarz	Teile-Nr.: 5114 55 220
Mini Cooper S/CooperS Clubman - weiß	Teile-Nr.: 5114 55 310
Mini Cooper S/Cooper S Clubman - schwarz	Teile-Nr.: 5114 55 320
1 Verkleberakel	

Montageanleitung

AC Schnitzer Deko - Set MINI

2. Anbringen des AC Schnitzer Deko - Sets

Klebeband o.ä. im Abstand von 185mm parallel zum Seitenschweller auf dem Fahrzeug kleben (Abb. 1).

Reihenfolge zum Anbringen der Dekostreifen:

1. Tür
2. Kotflügel vorne
3. Seitenwand hinten
4. Heckklappe

Tür: Schutzfolie am vorderen Ende vom Dekostreifen etwas abziehen. Streifen vorne an der Tür ansetzen und mit einer Kleberakel von vorne nach hinten - durch langsames Abziehen der Schutzfolie - entlang der Abstandsmarkierung auf die Tür kleben (Abb. 2). Anschließend Trägerfolie abziehen! Überstehendes Material des Dekostreifens mit einem Cuttermesser abschneiden.

Hinweis!

Dekostreifen nicht über die Abstandsmarkierung kleben! Türstreifen am besten zu zweit anbringen!

TIPP!



Auf Grund der Breite des Designstreifens und das damit verbundene Zuschneiden am Türübergang, empfehlen wir, um einen sauberen graden Schnitt zu gewährleisten, den Schnittverlauf mit einem Klebestreifen (1) zuvor festzulegen (Abb. 3).

Hinweis!

Vorgehensweise beim Zuschneiden der Streifen:
Die Folienteile an den Türfugen mit einem Cuttermesser durchtrennen und sorgfältig andrücken (nicht um die Kante drücken) (Abb. 2).

(Beschreibung gilt für beide Seiten – links/rechts beachten)

(Abbildungen mit Cooper S Deko - Set durchgeführt)

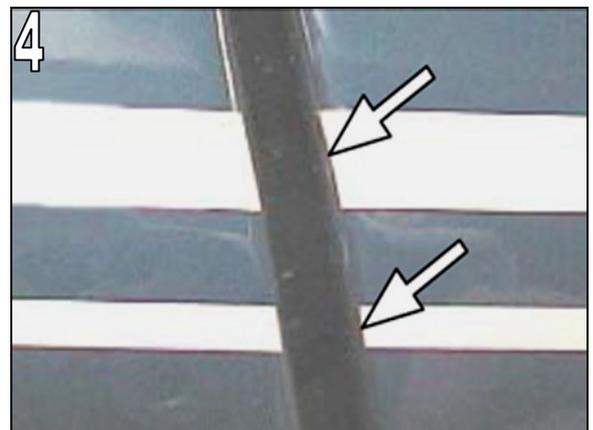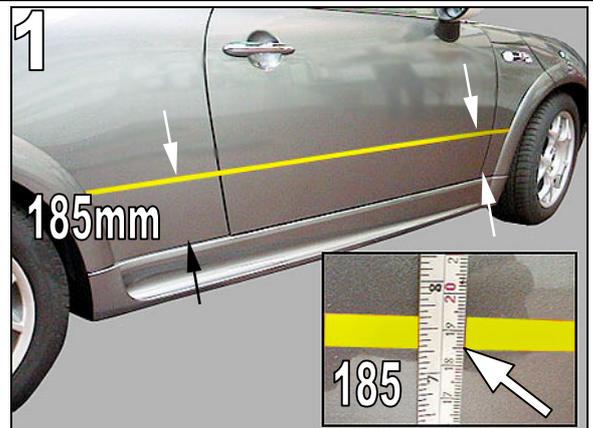

Montageanleitung

AC Schnitzer Deko - Set MINI

2. Anbringen ... (Fortsetzung)

Kotflügel vorne: Schutzfolie vom Dekostreifen abziehen und mit der Trägerfolie entlang der Abstandsmarkierung so anbringen, das an beiden Seiten gleich viel übersteht (Abb. 5). Mit dem Kleberakel fest andrücken und Trägerfolie anschließend abziehen. Überstehendes Material des Dekostreifens vorne und hinten mit einem Cuttermesser abschneiden.

Die Abstandsmarkierung (Klebeband) hinten an der Seitenwand, im Bereich des AC Schnitzer Logos unterbrechen (Abb. 6).

Seitenwand hinten: Schutzfolie vom Dekostreifen abziehen und mit der Trägerfolie entlang der Abstandsmarkierung so anbringen, dass das AC Schnitzer Logo mittig auf der Seitenwand / Tür platziert ist (Abb. 7). Mit dem Kleberakel fest andrücken und Trägerfolie anschließend abziehen. Überstehendes Material des Dekostreifens vorne und hinten im Verlauf der Türspalte / Radhausverbreiterung mit einem Cuttermesser abschneiden.

Abstandsmarkierung (Klebeband) abziehen.



Heckklappe: Schutzfolie vom AC Schnitzer Logo abziehen. Logo mit der Trägerfolie mittig zwischen der Kennzeichenmulde und der Abschlusskante der Heckklappe, sowie $X = \text{ca. } 200\text{mm}$ vom Spalt zwischen Heckklappe und Heckschürze aus nach oben positionieren (Abb. 8). Mit dem Kleberakel fest andrücken und Trägerfolie anschließend abziehen.

Bei Mini R56 AC Schnitzer Logo $X = \text{ca. } 215\text{mm}$ vom Spalt zwischen Heckklappe und Heckschürze aus nach oben positionieren.

Bei Mini R55 AC Schnitzer Logo $X = 140\text{mm}$ ca. vom Spalt zwischen Heckklappe und Heckschürze aus nach oben positionieren.

Beim **Cooper S** das zusätzlich mitgelieferte Logo unterhalb des AC Schnitzer Logos, auf der Heckklappe, mittig kleben.

Irrtum und Änderung vorbehalten!

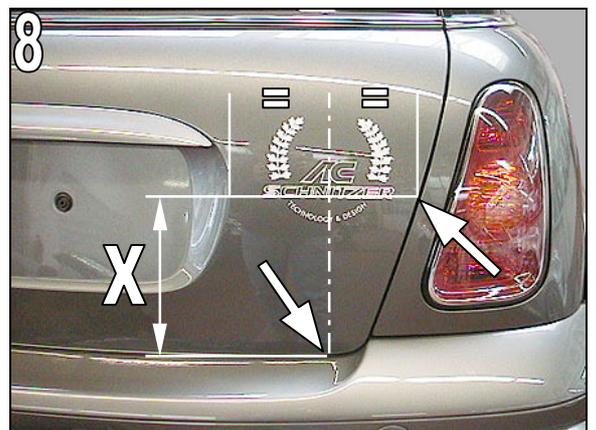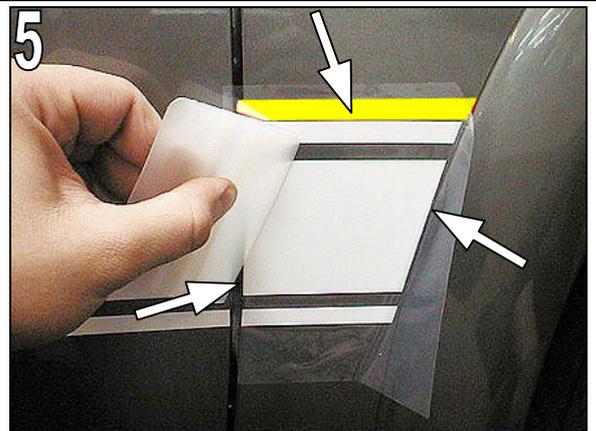

AC[®] SCHNITZER

- Fitting Instructions -

**Decor Set
- Mini -**



Part-No.: 5114 55 xxx

General Notes!

AC Schnitzer Decor Set MINI

Important Notes!

Read these Fitting Instructions carefully before starting installation work. AC Schnitzer bears no liability for damage caused by incorrect installation!

These Fitting Instructions are intended for use by an authorised AC Schnitzer dealer.

These Fitting Instructions are directed in each case to specialists trained in BMW vehicles, with corresponding professional knowledge.

The AC Schnitzer design stripes should be attached at body and ambient temperatures of 18°C to 25°C.

At temperatures below 18°C, the adhesive will not stick properly. The lower temperature limit of 18°C must be observed.

Fitting

Wash upper part of vehicle without using waxing agents.

Immediately before applying the stripes, wipe the part to be covered using silicon remover to ensure that any silicon, grease and oil residue is removed.

Puncture any air bubbles using a sharp needle or similar and smooth out.

Fitting Time (1 unit = 5 minutes)

The fitting time is around **12 units**, which may differ according to the condition and equipment level of the vehicle.

Tools Required

knife
cloth
silicon remover
adhesive tape

Components Supplied

1 AC Schnitzer decor set for:	
Mini One/Cooper/Cooper Clubman – white	Part No.: 5114 55 210
Mini One/Cooper/Cooper Clubman – black	Part No.: 5114 55 220
Mini Cooper S/CooperS Clubman – white	Part No.: 5114 55 310
Mini Cooper S/Cooper S Clubman – black	Part No.: 5114 55 320
1 sticker applicator	

Fitting Instructions

AC Schnitzer Decor Set MINI

2. Applying the AC Schnitzer Decor Set

Stick masking tape or similar to the vehicle parallel to and at a distance of 185mm from the side skirt (Fig. 1).

Order of application of decor stripes:

1. Door
2. Front wing
3. Rear side wall
4. Boot

Door: Lift the protective film away from the front end of the decor stripe. Position the stripes at the front end of the door and using an applicator, affix to the door from front to back - by slowly pulling off the protective film - along the spacer marking on the door (Fig. 2). Then remove the backing film! Cut away any surplus material from the decor stripe using a cutter.

Note!

Do not stick decor stripes over the spacer marking! It is easier to apply the door stripes with the help of another person!

TIP

Because of the width of the design stripe and the resulting need to trim this at the door transition, to guarantee a neat edge we recommend first marking the course of the cut with masking tape (1) (Fig. 3).



Note!

Procedure for cutting the stripes:

Using a cutter, cut through the foil part at the door joint and press on carefully (do not press around edges) (Fig. 4).

(Description applies to both sides - ensure correct allocation of left and right)

(Pictures show Cooper S with decor set applied)

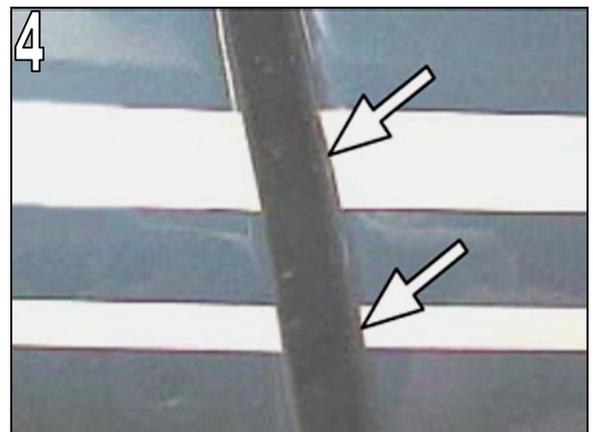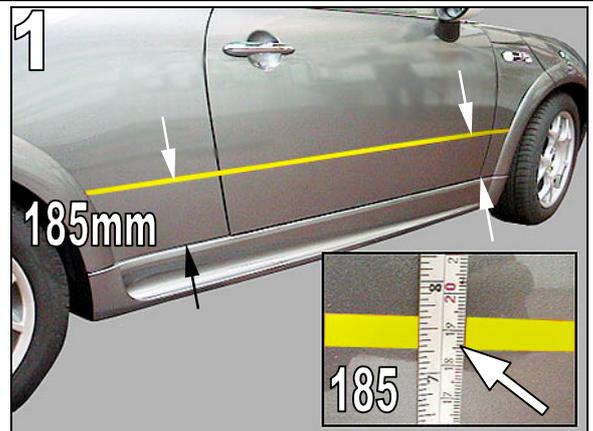


Fitting Instructions

AC Schnitzer Decor Set MINI

2. Applying ... (cont'd.)

Front wing: Pull the protective film away from the decor stripes and using the backing film stick along the spacer marking, apply the stripes to the wing so that the same amount projects on both sides (Fig. 5). Press firmly with the applicator and then pull away the backing film. Cut away surplus material of the stripes at the front and back with a cutter.

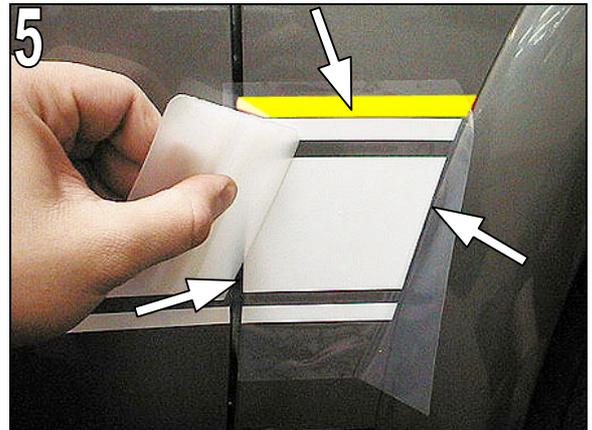

Interrupt the spacer marking (masking tape) at the side wall at the back in the area of the AC Schnitzer logo (Fig. 6).

Rear side wall: Pull the protective film away from the decor stripe, and using the backing film stick along the spacer marking, apply the stripes to the rear side panel / door so that the AC Schnitzer logo is placed centrally on the panel / door. (Fig. 7). Press firmly with the applicator and then pull away the backing film. Cut away surplus material of the stripes at the front and back in the door gap / wheelarch extension using a cutter.



Pull away the spacer marking (masking tape).

Puncture any air bubbles using a sharp needle or similar and smooth out.


Boot: Pull the protective film away from the AC Schnitzer logo, position logo with backing film centrally between the registration plate recess and the boot edge - and approx. 200mm up from the gap between the boot lid and the rear skirt (Fig. 8). Press firmly with the applicator and then pull away the backing film.



For Mini R56, position the AC Schnitzer logo X = approx. 215mm up from the gap between the boot and the rear skirt.

For Mini R55, position the AC Schnitzer logo X = approx. 140mm up from the gap between the boot and the rear skirt.

On the **Cooper S**, stick the extra logo supplied below the AC Schnitzer logo on the boot lid.

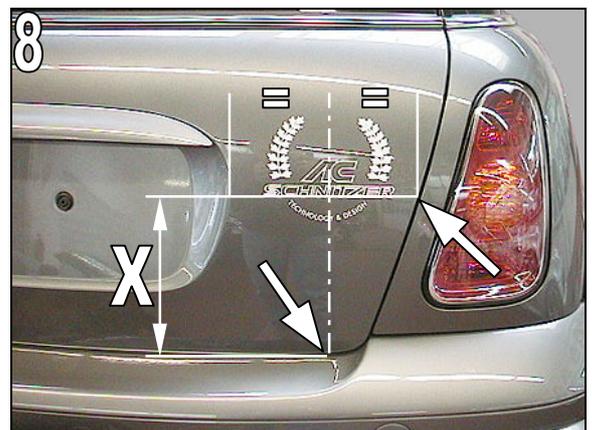

Subject to errors and modifications!