



Installation of JCW Steering Wheel Gen. II

7. Remove torx screws from the back of the right and left post. These screws secure the steering wheel controls. You can then slowly pry with your fingers moving around the controls until they come out. This may take a few minutes as these piece are pressed fitted. Be careful since the controls are thin plastic and can break if too much force is applied. The bottom post cover can be removed in the same manner but does not have a screw holding it into place. Remove the plug from the back of each control and remove harness from the old wheel paying attention to the trench created for the harness.

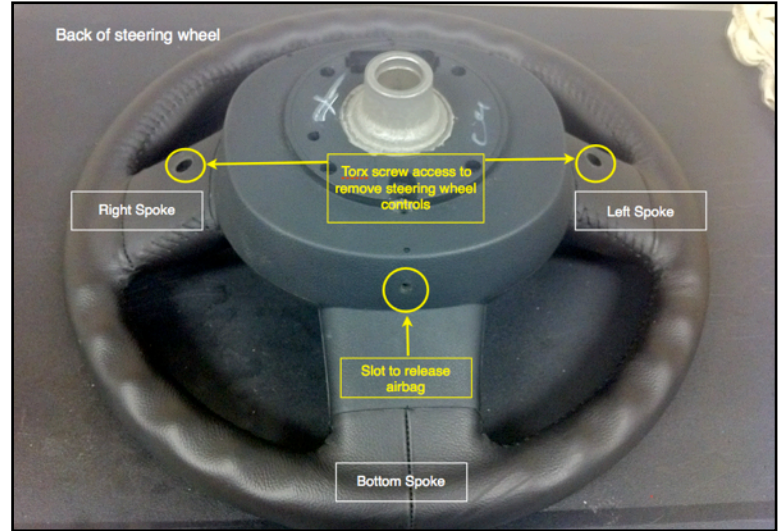

8. Reinstall harness into new wheel. Connect plugs into back of switches and press the controls into the wheel. After insuring proper routing of harness, reinstall airbag retaining plate and control screws.

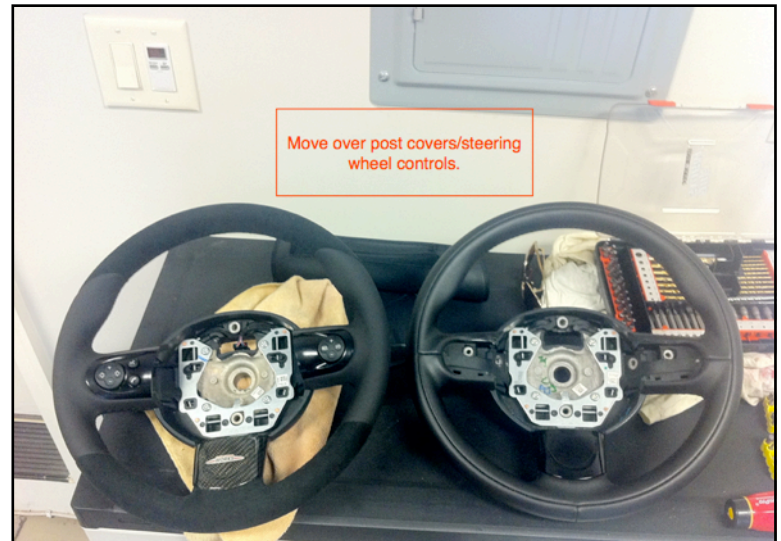

9. Now it's time to install the new steering wheel. Before you do that, take time to notice the slot in the bottom of the steering wheel shaft. This is designed to make sure that the steering wheel goes back on in perfect place and the steering wheel is properly lined up.

